



# EZ-DOCT<sup>®</sup>

## Quick User Guide

rev. 1.00



EZ-FIBr®

SIGN IN

## Where the world builds connectivity

Hundreds of telecom operators and Information Technology companies, Configure, Tune, Diagnose and maintain their Optical Fibre Networks

The World most advanced optical connectivity platform !

SIGN UP



EZ-FIBr 2021 ©

Sign In the  
**EZ-FIBr®**  
Web Page !




EZ-FIBr®

Pro Tools EZ-FIBr OTC M

EZ-CHECKr®

- EZ-CHECKr®
- EZ-CODr®
- EZ-DOCTr®
- EZ-TUNr®

PN: SPDTU080100D-ADV  
SN: ZAB2F10002  
REV: A  
Comp. with: CISCO-Skylane  
**Tunable**  
Channel: C19



EZ-FIBr © 2021 EZ-MWr v. 0.00.062 [COOKIES SETTINGS](#)

Open the  
**EZ-FIBr®**  
ToolBox !



EZ-CHECKr®

EZ-CHECKr®


EZ-CODr®

EZ-DOCTr®

EZ-TUNr®

Let you monitor and store the optical transceiver settings!

PN: SPDTU080100D-F70  
SN: JAB2F10002  
REV: A  
Comp. with:  
ADVA  
**Tunable**  
Channel: C14

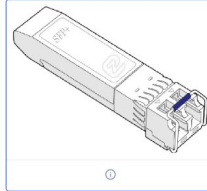

Select the  
**EZ-DOCTr®**  
Tool!



The screenshot shows the EZ-FIBr software interface. At the top left is the EZ-FIBr logo. The top right corner contains the text "Pro Tools" and a blue button labeled "EZ-FIBr OTC". Below the header, there is a dropdown menu showing "EZ-D O C T r®". The main area is dimmed, showing a technical drawing of a device with a box highlighting the following text:

PN:  
SPDTU080100D-F70  
SN:  
2AB2F10002  
REV: A  
Comp. with:

A modal warning dialog is centered on the screen. It features the EZ-FIBr logo and the title "EZ- D O C T r® Warning!!!". The main text reads: "Don't unplug the EZ-FIBr OTC nor the optical transceiver until the EZ- D O C T r® process is complete!". Below this text is a checkbox labeled "Dont show me again" which is currently unchecked. A blue "CONTINUE" button is located at the bottom right of the dialog box.

At the bottom of the interface, there is a footer with the text "EZ-FIBr © 2021" on the left, "EZ- MWr v. 0.00.062" in the center, and a link for "COOKIES SETTINGS" on the right.

Read the  
**EZ- D O C T r®**  
Warning message!



EZ-DOCTr®

● Laser: OFF


Temperature

SFP DDM



CANCEL

○ RECORD

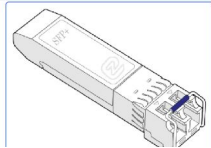

Once on the **EZ-TUNr®** page

Follow the  
easy as  
**1, 2, 3**  
tuning process




EZ-D O C T r®


Laser: ON [ Laser will automatically switch OFF in 2 sec ]

Temperature

SFP DDM

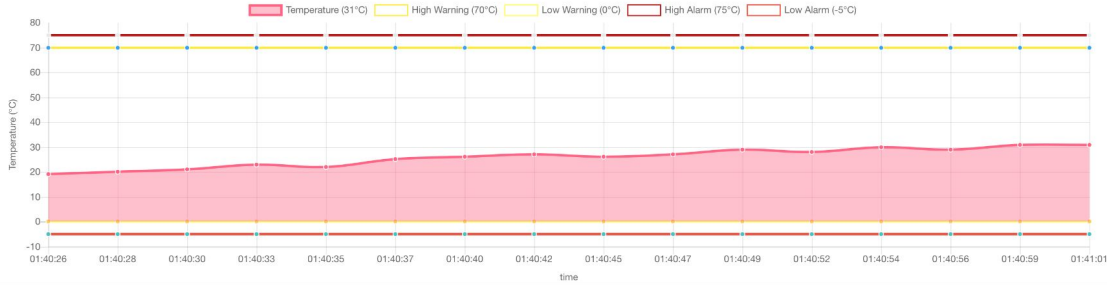

CANCEL RECORD

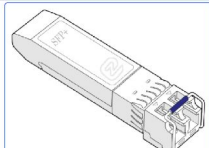


1

Switch On/Off  
the lazer !




EZ-D O C T r®

● Laser: OFF

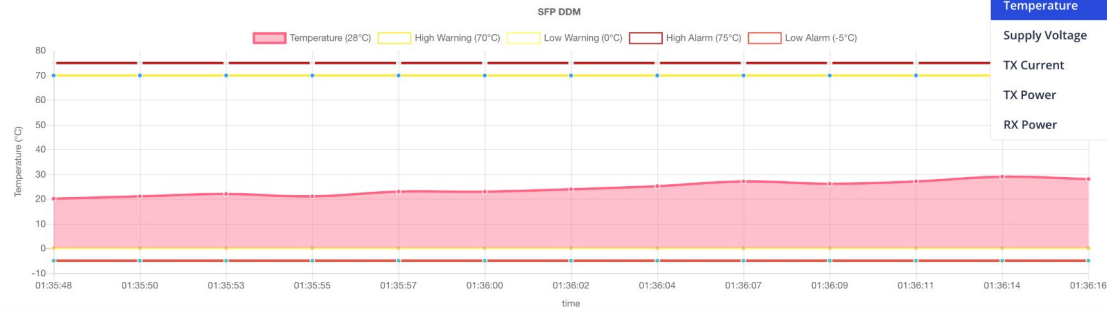

CANCEL

○ RECORD

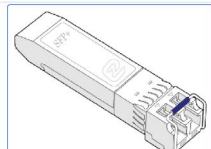

# 2

Select  
the desired value !






EZ-D OCT r®

Laser: OFF


Temperature

SFP DDM

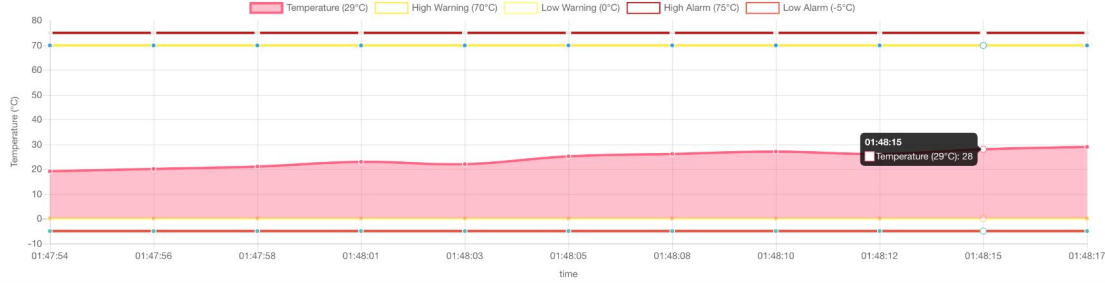

CANCEL

RECORD

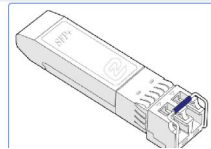

# 3

it's **DONE!**



# EZ-DOCT<sup>®</sup>

## Tips & Tricks

rev. 1.00



- recording diagnosis results
  - saving diagnosis results
  - sending diagnosis results
- receiving diagnosis results
  - reading diagnosis results
- create a shortcut (win / lin / mac)

Did you know ?

- set your view preferences hide/unhide the optical transceiver alarm warning and alarm threshold
- set your optical transceiver alarm warning and alarm threshold
-